



AIR HAMMER

MODEL NO: CAT29B & CAT95

PART NO: 3110408 & 3110851

OPERATING & MAINTENANCE INSTRUCTIONS

GC0614

INTRODUCTION

Thank you for purchasing this CLARKE Air Hammer. **The CAT29B and CAT95 differ only by virtue of the CAT95 having a polished metal casing as opposed to a painted finish.**

Before attempting to use this product, please read this manual thoroughly and follow the instructions carefully. In doing so you will ensure the safety of yourself and that of others around you, and you can look forward to your purchase giving you long and satisfactory service.

GUARANTEE

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission. This guarantee does not effect your statutory rights.

SPECIFICATIONS

Maximum Operating Pressure	90 psi (6.2 bar)
Nominal Air Consumption	4 cfm
Max Blows per Min.	3000
Air Inlet Size	1/4" BSP thread
Vibration Levels	4 m/s ²
Sound pressure level	101 dB A
Sound power level	111 dB LWA
Dimensions (L x W x H)	190 x 170 x 50 mm
Weight	2.5 kg

Please note that the details and specifications contained herein are correct at the time of going to print. However CLARKE International reserve the right to change specifications at any time without prior notice.

GENERAL SAFETY RULES



CAUTION: FAILURE TO FOLLOW THESE PRECAUTIONS COULD RESULT IN PERSONAL INJURY, AND/OR DAMAGE TO PROPERTY.

WORK ENVIRONMENT

1. Keep the work area clean and tidy.
2. Dress appropriately - Do not wear loose clothing or jewellery. Tie long hair out of the way.
3. Keep children and visitors away - Do not let children handle the tool.

USE

1. Stay alert and use common sense - do not operate the tool when you are tired or under the influence of alcohol, drugs or medication.
2. Always wear eye protectors when using the tool - eye protectors must provide protection from flying particles from the front and the side.
3. Always wear ear protectors when using the tool.
4. Do not overreach - Keep proper footing and balance at all times.
5. Never use any type of bottled gas as a source of power for the tool.
6. Do not connect the air hose with your finger on the trigger of the tool.
7. Do not exceed the maximum pressure for the tool 90 psi / 6.2 bar.
8. Check hoses for leaks or worn condition before use, and ensure that all connections are secure.
9. Do not use the tool for any other purpose than that described here.
10. Do not carry out any alterations or modifications to the tool.
11. Always disconnect from the air supply when:
 - Performing any maintenance
 - The tool is not in use.
 - The tool will be left unattended.
 - Moving to another work area.
 - Passing the tool to another person.
12. Never use the tool if it is defective or operating abnormally.

13. The tool should be serviced at regular intervals by qualified service personnel.
14. Avoid damaging the tool for example by applying excessive force of any kind.
15. ALWAYS maintain the tool with care. Keep it clean for the best and safest performance.
16. Quick change couplings should not be located at the tool. They add weight and could fail due to vibration.
17. DO NOT force or misuse the tool. It will do a better and safer job at the rate for which it was designed.
18. Do not remove any labels. Damaged labels should be replaced.
19. This tool vibrates with use. Vibration may be harmful to your hands or arms. Stop using the tool if discomfort, a tingling feeling or pain occurs. Seek medical advice before resuming use.

AIR HAMMER SPECIFIC HAZARDS

1. Only use accessories designed for use with this power tool.
2. Never use any of the chisels supplied as hand struck tool.
3. Never use blunt chisels which require excessive pressure and can break from fatigue. Always use sharp tools.
4. Never mis-use the tool by prising which can result in a broken tool.
5. Ensure there are no hidden electrical cables, gas pipes etc, which could cause a hazard if damaged by action of the chisels.

IMPORTANT

Please read all of the safety and operating instructions carefully before using this product. The following safety symbols are to be found on the machine.

	Read this instruction booklet carefully before use.		Wear ear protection
	Wear eye protection		Wear dust mask.


Keep these instructions in a safe place for future reference.

COMPRESSED AIR REQUIREMENTS




WARNING: COMPRESSED AIR CAN BE DANGEROUS. ENSURE THAT YOU ARE FAMILIAR WITH ALL PRECAUTIONS RELATING TO THE USE OF COMPRESSORS AND COMPRESSED AIR SUPPLY.

- Use only clean, dry, regulated compressed air as a power source.
- Air compressors used with the impact wrench must comply with the appropriate European Community Safety Directives.
- A build-up of moisture or oil in the air compressor will accelerate wear and corrosion in the impact wrench. ensure any moisture is drained from the compressor daily and the inlet filter is kept clean.
- If an unusually long air hose is required, (over 8 metres), the line pressure or the hose inside diameter may need to be increased.
- The air hose must be rated at least 150% of the maximum operating pressure of the tool.

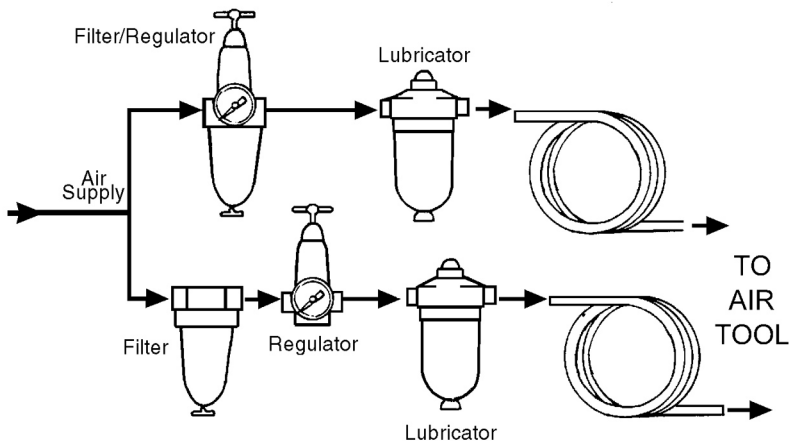

- A typical air line layout is shown above. If an automatic in-line filter/regulator is used, it will keep the tool in good condition, but should be regularly checked and topped up with oil. SAE 10 oil should be used, and the lubricator adjusted to approx 2 drops per minute.
- Never exceed the maximum operating pressure for the tool. It is recommended that air pressure to this tool does not exceed 90 psi at the tool when running. Higher pressures and unclean air will shorten the life of the tool due to faster wear and is a possible safety hazard.

OVERVIEW

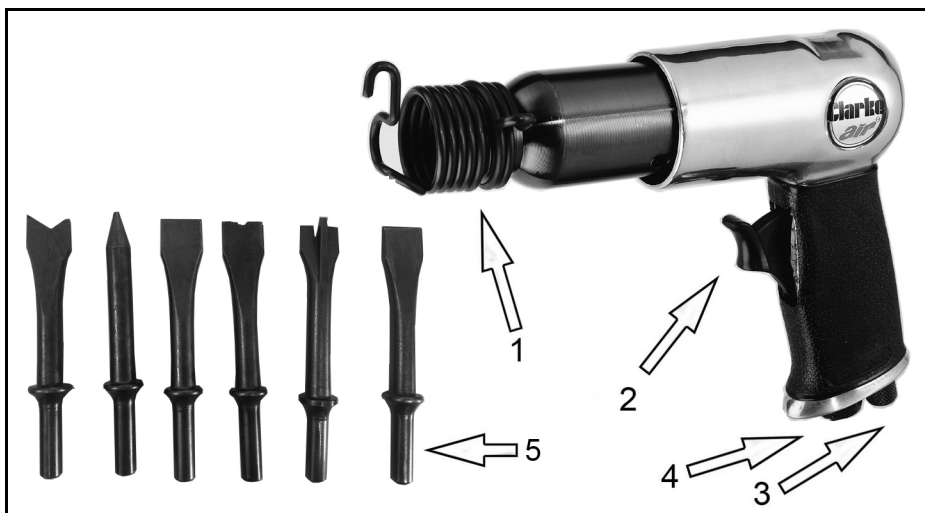

NO	DESCRIPTION	NO	DESCRIPTION
1	Retaining Spring	5	Chisel Set comprising: a Steel Cutter Chisel b Tapered Punch c Straihg Cold Chisel d Rivet Cutter Chisel e Double-sided Ripping Chisel f Straight Cold Chisel
2	Trigger		
3	Regulator		
4	1/4" BSP Female Air Inlet		

OPERATION

NOTE: Ensure the compressed air supply is turned off.

1. If required, connect an in-line mini oiler to the tool.

- A mini oiler helps to prolong the life of the air tool. Read the instructions supplied with the mini-oiler before use.


NOTE: If a mini-oiler is not being used, insert a few drops of oil into the tool through the air inlet before use.

NOTE: Ensure the compressed air supply is turned off.

1. If required, connect an in-line mini oiler to the tool.
 - A mini oiler helps to prolong the life of the air tool. Read the instructions supplied with the mini-oiler before use.
2. Connect a suitable hose to the tool and the other end of the hose to the compressed air supply.
3. Turn on the air supply and check for air leaks. Rectify any found before proceeding.
 - PTFE tape may be helpful for sealing threaded connections.
 - Your air tool is now ready for use.

FITTING THE CHISEL

1. First remove the retaining spring from the nose by unscrewing it.
 - Use the inboard lug to gain purchase.
2. Insert the chisel into the air hammer as shown.
3. Replace the retaining spring as shown.
 - Use the lugs to tighten.

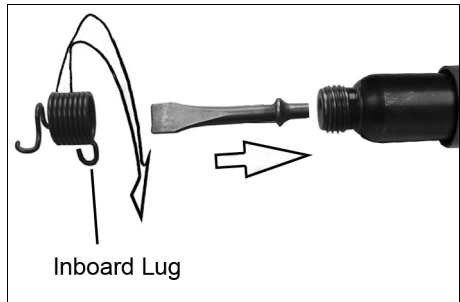

USING THE AIR HAMMER

1. Hold the tool firmly, then bring it towards the work at an angle of approximately 60-70 degrees.
2. Pull the trigger with the chisel in light contact with the work.
3. Move slowly across the work surface. To remove scale, rust or other contaminants, only a light force should be required.
4. Release the trigger to stop operation, whilst maintaining contact with the work.
5. Chisel force may be adjusted by turning the regulator knob, located at the base of the handle grip. Turn anti-clockwise (unscrew) to increase force, clockwise (screw in) to reduce.



NOTE: that the tool may impact briefly after the trigger is released.

- The retaining spring has a life expectancy, depending upon the intensity of usage. It is recommended that you procure a spare spring for use in the event of failure occurring during the course of a particular job.

DISCONNECTING THE AIR SUPPLY

Do not disconnect the air supply hose until the air supply has been shut down and the compressed air pressure released. Refer to the compressor instruction manual for the procedure to shut down and release the compressed air. Once the pressure has been released, disconnect the air supply hose from the tool.

STORAGE

If the tool is to be stored, or is idle for longer than 24 hours, run a few drops of Clarke air line oil into the air inlet, and run the tool for 5 seconds in order to lubricate the internal parts. Clarke air-line oil is available from your Clarke dealer, part no. 3050825.

TROUBLESHOOTING

SYMPTOM	PROBLEM	SOLUTION
Tool runs slowly or will not operate.	Dirt or gum in the tool	Flush the tool with air line oil or gum solvent.
	Air hose leaks.	Tighten and seal hose fittings with teflon tape.
	Low air pressure.	Adjust compressor regulator to 90 psi. Check the hose is the correct size and length.
	No oil in tool	Lubricate the tool.
	Worn rotor blades.	Return to Clarke dealer for repair.
	Water in airline.	Drain air receiver and/or in-line filter. Run tool until clear of water. Oil tool again.
Tool will not shut off.	O-rings damaged or ill-fitting in seat.	Return to Clarke dealer for repair.
Tool runs erratically.	Cylinder may have come loose from the housing.	Tighten cylinder or return to Clarke dealer.

MAINTENANCE



WARNING: MAKE SURE THAT THE TOOL IS DISCONNECTED FROM THE AIR SUPPLY BEFORE STARTING ANY CLEANING, OR MAINTENANCE PROCEDURES.

DAILY

1. Before use, drain water from the air tank, air line and compressor.
2. Pour a few drops of CLARKE airline oil, into the air inlet. This should be carried out regardless of whether or not an in-line mini oiler is used. If an inline mini oiler is not used, this procedure should be repeated after every two to three hours of use.
3. Check the air inlet screen filter for blockage and clean if necessary.

CLEANING

1. Keep the body of the tool clean and free from debris.
2. Grit or gum deposits in the tool may also reduce efficiency. This condition can be corrected by cleaning the air strainer and flushing out the tool with gum solvent oil, or failing this, the tool should be disassembled, thoroughly cleaned, dried and reassembled.
3. After extensive use, remove the inlet screen filter and flush out the mechanism with gum solvent oil or an equal mixture of SAE No10 oil and paraffin. Allow to dry before use.
4. If the tool runs erratically or becomes inefficient, and the air supply is of good quality, it may be necessary to dismantle the air motor and replace worn or damaged parts. You may prefer to take the tool to your CLARKE dealer if internal maintenance is required.


Your Clarke air tool has been designed to give long and trouble free service. If, however, having followed the instructions in this booklet carefully, you encounter problems, take the unit to your local Clarke dealer.

PERFORMANCE

Please note that factors other than the tool may effect its operation and efficiency such as reduced compressor output, excessive drain on the airline moisture or restrictions in the air-line, or the use of connectors of improper size or poor condition which will reduce air supply.

****Clarke Air Line Oil (part no. 3050825) is available from your CLARKE dealer.**

PARTS LIST & DIAGRAM

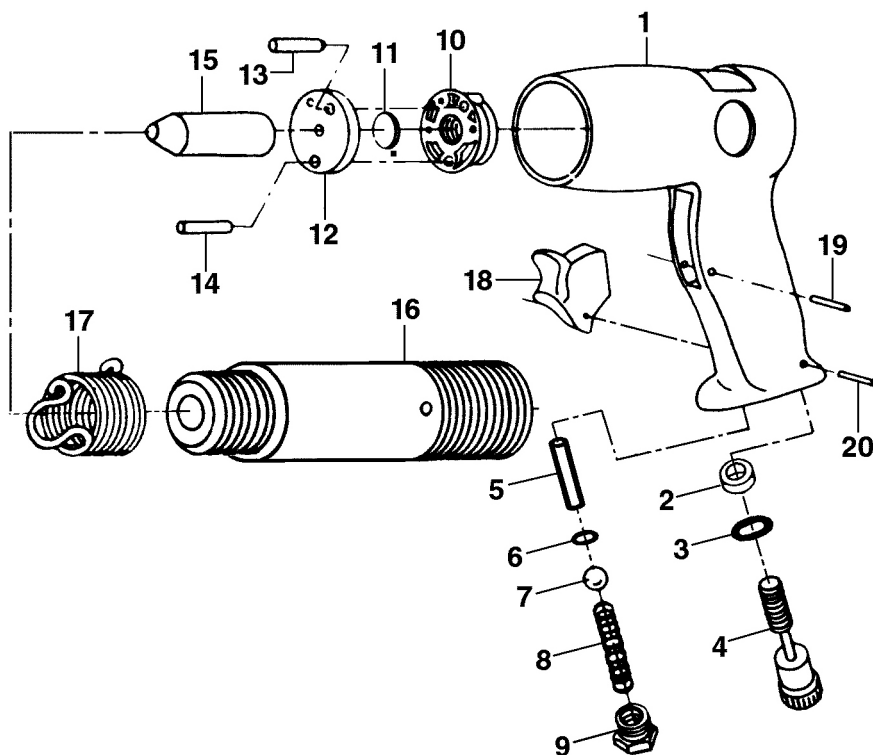

No	Description
1	Housing
2	Rubber Gasket
3	O-Ring
4	Regulator
5	Control Pin
6	O-Ring
7	Ball Valve
8	Spring
9	Air Inlet Connector
10	Rear Valve

No	Description
11	Valve Disc
12	Front Valve
13	Pin
14	Pin
15	Piston
16	Cylinder
17	Retainer Spring
18	Trigger
19	Roll Pin
20	Roll Pin

DECLARATIONS OF CONFORMITY

DECLARATION OF CONFORMITY

We declare that this product complies to the following standards/directives:

- 89/392/EEC
- 91/368/EEC
- 93/44/EEC
- 93/68/EEC

Product Description: **AIR HAMMER**

Model Number: **CAT29 (all marques)**

Serial (Batch) No: **See tools' data plate**

Signed 

Clarke INTERNATIONAL

Hemnal Street, Epping, Essex CM16 4LG

Clarke International is a trading style of Clarke International Limited

Clarke
INTERNATIONAL

This is an important document and should be retained

DECLARATION OF CONFORMITY



We declare that this product complies with the following standards/directives:

- 89/329/EEC
- EN 292-2

Description: **AIR TOOL**

Model No: **CAT95**

Serial (Batch) No:

Signed: 

Clarke INTERNATIONAL
Hemnal Street, Epping, Essex CM16 4LG

DOC No: H075/27 Clarke International is a trading style of Clarke International Limited

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS

AIR COMPRESSORS

From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS

Prime duty or emergency standby for business, home and leisure.

POWER WASHERS

Hot and cold, electric and engine driven - we have what you need

WELDERS

Mig, Arc, Tig and Spot.
From DIY to auto/industrial.

METALWORKING

Drills, grinders and saws for DIY and professional use.

WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS

Submersible, electric and engine driven for DIY, agriculture and industry.

POWER TOOLS

Angle grinders, cordless drill sets, saws and sanders.

STARTERS/CHARGERS

All sizes for car and commercial use.



PARTS & SERVICE: 020 8988 7400

E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke® INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com